

## How do I chase an external Timecode source ... ?

The DMX-R100 automation will chase to an internal generator, external SMPTE Timecode or Midi Timecode (MTC).

Select the Timecode source from the Timecode Reader menu.

### Notes:

- Midi Timecode (MTC) must be input to the MTC connector for the TC reader to 'see' it. MTC cannot be read from the MIDI IN connector.
- The incoming Timecode frame-rate must match the console setting; otherwise the automation will not work correctly.
- The TC Out connector supplies SMPTE Timecode from the internal Timecode generator, this can operate independently of the Timecode reader or the Timecode reader can lock to the generator.
- The DMX-R100 cannot generate MTC.