


## Opening DMX-R100 front panel

To open the DMX-R100 front panel, first remove all 24 gain control knobs (marked in green on the diagram below).

Next remove the three silver screws (marked in blue on the diagram).

Then remove the four screws at the top of the back panel, and the five screws under the front edge of the mixer (positions marked in red on the diagram), and the 10 screws marked in purple along each side of the unit.

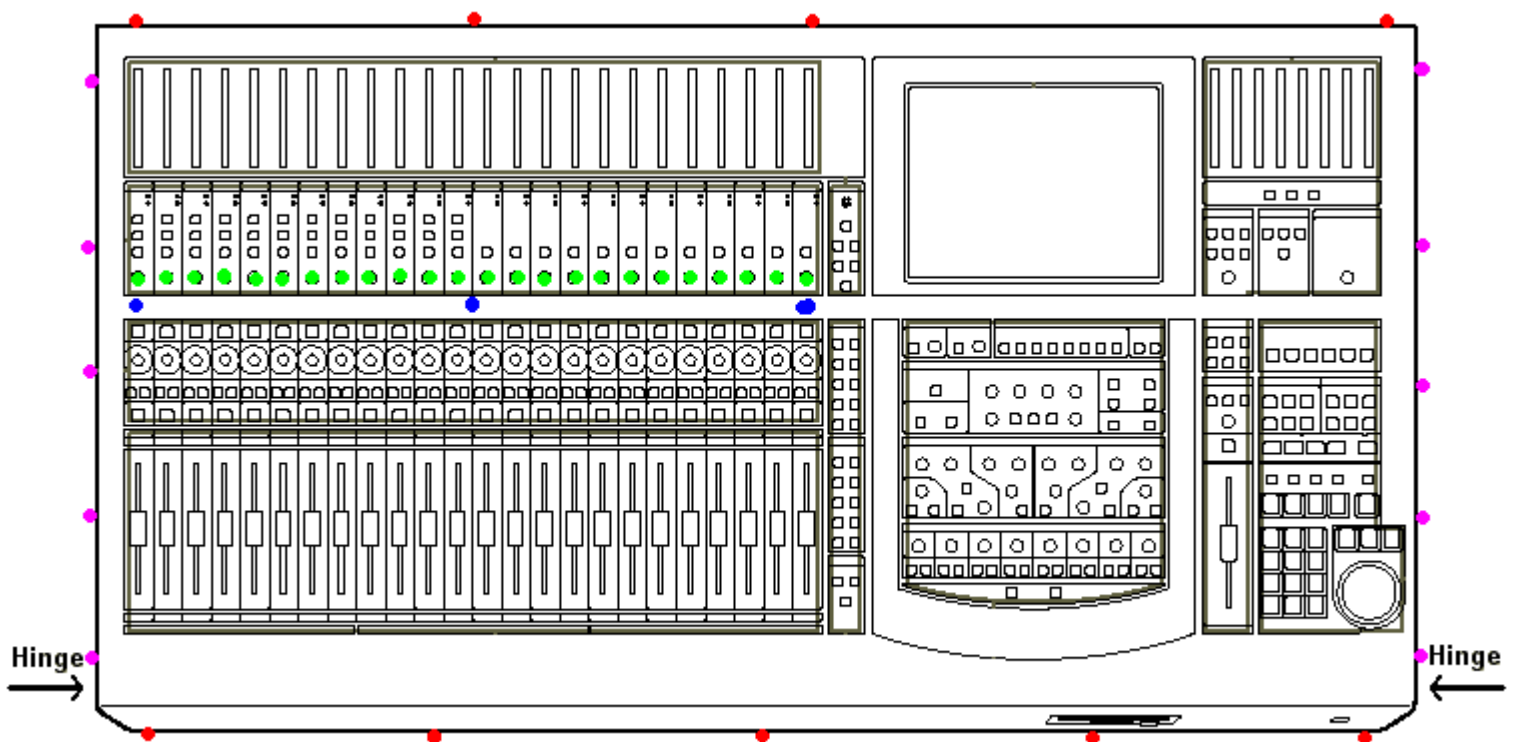

The complete front panel now hinges up and forward around the hinge points shown.

Once open the front panel can be supported using the metal stay-bars at each end of the case. Inside early units there are two supports that can be used to hold the front panel open, in later models the stay is at one end only (not shown).

Figure 1 (below), shows the right-hand stay-bar in the stored position.


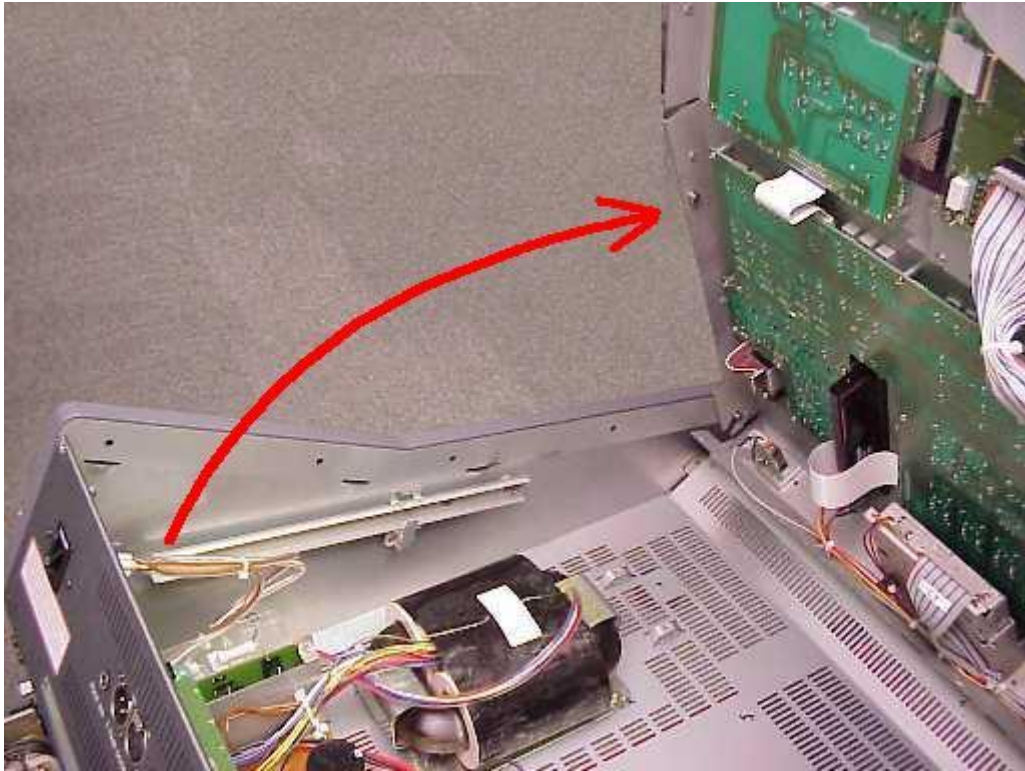


Figure 2 (below), shows the right-hand stay bar locked in place holding the case open

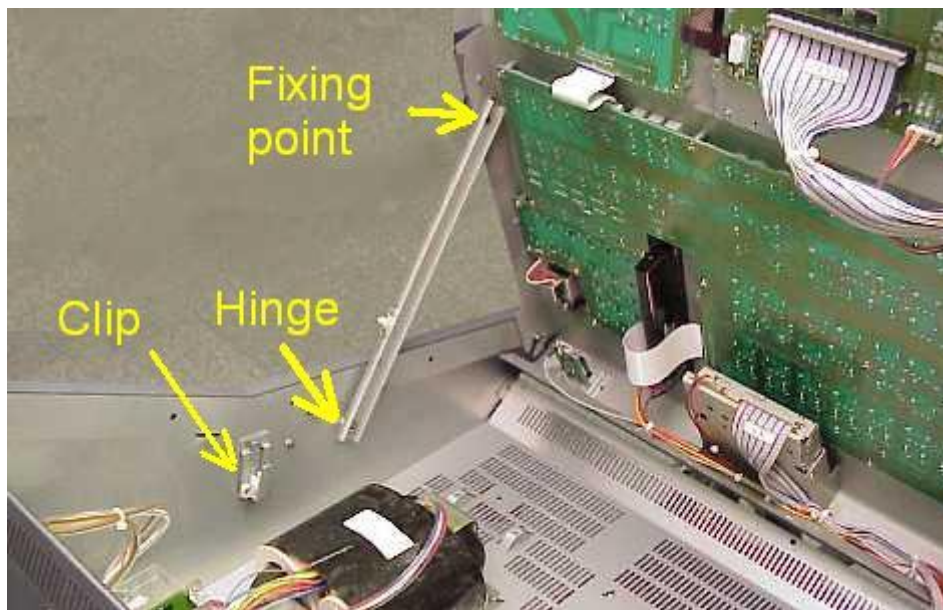

**WARNING: DO NOT MOVE THE CONSOLE WITH THE FRONT PANEL OPEN**